

A

Abbreviations	0A-21
ABS Operation.....	5E1-4
A/C System Odor Procedure	1B-26
A/C System (Suburban) Rear	1B-40
A/C System Capacities.....	1B-48
Accessory Switch Replacement.....	8C-13
Accumulator (HVAC).....	1B-34
Accumulator Housing Assembly, Removal	7A17D-10
Actuator (HVAC), Mode.....	1B-39
Actuator, Temperature/Defrost (HVAC)	1B-39
Actuator Replacement, Thermal.....	4C-5
Adjustable Belt Tension Specifications	0B-15
Adjustment, Duo-Servo Drum Brake.....	5C2-4
Adjustment, Leading/Trailing Drum Brake	5C1-6
Air Cleaner (6.5L V8)	6C-2
Air Cleaner Filter Replacement (6.5L V8)	6C-2
Air Conditioning System Odor Procedure	1B-26
Air Deflector Replacement	2A-7
Air Distribution System (HVAC)	1B-4
Air Distributor Duct (Heater).....	1A-13
Air Distributor Duct (HVAC).....	1B-38
Alignment Specifications, C-Model	3A-11
Alignment Specifications, K-Model.....	3A-12
All Seasons Tires	3E-2
Aluminum Wheels.....	3E-13
Amplifier, Radio.....	9A-27
Anchor Plate Wear Adjustments, Front Disc Brake Caliper	5B1-9
Anchor Plate Wear Adjustments, Rear Disc Brake Caliper	5B2-6
Anchor Plate, Front Disc Brake.....	5B1-10
Anchor Plate, Rear Disc Brake.....	5B2-6
Antennas	9A-32
Antenna Cable Replacement	9A-34
Antenna Replacement	9A-33
Appliques Replacement, Adhesive-Retained	2B-24
Approximate Fluid Capacities	0B-14
Ashtray Lamp Replacement.....	8B-13
Assist Handle Replacement.....	10A4-6
Audio Systems.....	9A-1
Audio Systems Diagnosis	9A-6
Automatic Transmission Diagnosis, 4L80E	7A17A-1
Band Apply Pin Check for Rear Servo Assembly.....	7A17D-13
Changing the Fluid and Filter.....	7A17D-6
Clutch Application Chart.....	7A17A-11
Component Resistance Chart.....	7A14A-38
Control Valve Assembly.....	7A17D-11
Control Valve Assembly and Accumulator Housing Installation.....	7A17D-11
Diagnosis, Torque Converter Clutch.....	7A17D-3
Electronic Component Location.....	7A17A-14
Electrical/Garage Shift Test	7A17A-3
Filler Tube Replacement.....	7A17D-16
Flexplate/Torque Converter Vibration Test	7A14A-22
Fluid Flow and Circuit Descriptions	7A14A-54
Fluid Leak Diagnosis	7A14A-52
Fluid Passages Identification.....	7A14A-78
Front Servo Replacement.....	7A17D-13
Functional Test Procedure.....	7A14A-17
Hoist Test Procedure	7A17A-3
Internal Wiring Harness Check	7A14A-36
Leak Inspection Points	7A14A-53

Line Pressure Test Procedure.....	7A14A-17
Noise and Vibration Analysis.....	7A17A-6
Park Lock Pawl and Actuator Assembly.....	7A17D-5
Preliminary Checking Procedures.....	7A17A-6
Pressure Switch Assembly Resistance Check	7A14A-39
Rear Servo Accumulator.....	7A17D-14
Road Test Procedure	7A14A-20
Sensor, manifold Absolute Pressure (MASP) Replacement	7A17D-20
Sensor, Throttle Position (TP) Replacement	7A17D-20
Shift Conditions	7A14A-1
Shift Indicator Replacement and Adjustment.....	7A17D-20
Shift Linkage.....	7A17D-3
Shift Speed Chart.....	7A17A-10
Solenoid, 1-2	7A17A-15
Solenoid, 2-3	7A17A-16
Solenoid, Pressure Control	7A17A-15
Solenoid, Torque Converter Clutch.....	7A17A-15
Switch Assembly, Resistance Check Pressure	7A14A-39
TCC Shudder.....	7A14A-21
Throttle Positions.....	7A14A-1
Transmission Adapt Function	7A14A-3
Transmission Component and System Descriptions.....	7A14A-3
Transmission Cooler Flushing	7A17D-19
Transmission Electrical Connector	7A14A-9
Transmission Fluid Checking Procedure.....	7A14A-16
Transmission Replacement.....	7A17D-16
Trouble Code Actions.....	7A14A-14
Torque Converter Clutch (TCC) Diagnosis.....	7A14A-20
Torque Converter Evaluation	7A14A-20
Auxiliary Camper Battery (Gas Engine Vehicles).....	6D1-4
Auxiliary Cooling Fan Engine Coolant Temperature Sensor	6B1-17
Auxiliary Cooling Fan Relay.....	6B1-13
Auxiliary Cooling Fan Replacement.....	6B1-13
Auxiliary Heater Pipe (Aux. Heater).....	1A-17
Auxiliary Heater.....	1A-3
Axle Replacement, Drive	4C-6
Axle Shaft Replacement, (10 1/2-Inch Ring Gear)	4B1-13
Axle Shaft Replacement, (11-Inch Ring Gear)	4B1-16
Axle Shaft, Oil Seal, and Bearing Replacement.....	4B1-8

B

Backing Plate, Duo-Servo Drum Brake	5C2-4
Backing Plate, Leading/Trailing Drum Brake	5C1-6
Balance Shaft Replacement (4.3L)	6A3-21
Balancing Tire And Wheel.....	3E-12
Balancing Tires and Wheels	0C-7
Ball Joint Wear Check.....	3C-5
Battery: Charging	6D1-7
Electrical Drain	6D1-6
Freezing	6D1-3
Protection During Vehicle Storage	6D1-3
Replacement.....	6D1-10

INDEX-2

Specifications	6D1-12
Testing	6D1-5
Bearing Adjustment	4B1-15
Bearing Replacement, Differential Pilot	4C-17
Belt Tensioner Braces 4.3L, 5.0L, and 5.7L Engines with A/C	6B1-25
Bench Bleeding.....	5A1-4
Bleeding Brake Hydraulic System	5A-12
Bleeding System, 4WAL.....	5E1-52
Bleeding the Hydraulic Booster System	5D2-9
Block Heater	9E-1
Blower Motor and Fan (Aux. Heater)	1A-20
Blower Motor and Fan (Aux. HVAC)	1B-46
Blower Motor and Fan (Heater).....	1A-12
Blower Motor and Fan (HVAC)	1B-46
Blower Motor Relay (HVAC)	1B-33
Blower Motor Resistor (Aux. Heater).....	1A-20
Blower Motor Resistor (Aux. HVAC).....	1B-45
Blower Motor Resistor (Heater)	1A-11
Blower Motor Resistor (HVAC)	1B-38
Blower Switch (Heater), Control Assembly and	1A-10
Brake:	
4WAL Bleeding System	5E1-52
4WAL Brake Pressure Modulator Valve.....	5E1A-4,53
4WAL Clearing Diagnostic Trouble Codes	5E1-8
4WAL Component Location Views	5E1-6,
4WAL Connector Face Views.....	5E1-14
4WAL Diagnosis.....	5E1-7
4WAL Diagnostic Trouble Code and Symptom Table	5E1-12
4WAL Displaying Diagnostic Trouble Codes	5E1-8
4WAL Front Wheel Speed Sensor.....	5E1A-5,54,55
4WAL Functional Test.....	5E1-10
4WAL System Operation	5E1-3
4WAL Vehicle Speed Sensor Calibrator	5E1-5,57
4WAL Vehicle Speed Sensor	5E1-5,57
4WAL Wiring Diagram.....	5E1-13
Brake Adjustment, Duo-Servo Drum.....	5C2-4
Brake Adjustment, Leading/Trailing Drum	5C1-6
Brake Anchor Plate, Front Disc.....	5B1-10
Brake Anchor Plate, Rear Disc.....	5B2-6
Brake Backing Plate Replacement	4B1-11
Brake Backing Plate, Duo-Servo Drum	5C2-4
Brake Backing Plate, Leading/Trailing Drum.....	5C1-6
Brake Caliper and Anchor Plate Wear Adjustments, Front Disc.....	5B1-10
Brake Caliper and Anchor Plate Wear Adjustments, Rear Disc	5B2-6
Brake Caliper Inspection, Front Disc.....	5B1-4
Brake Caliper Inspection, Rear Disc	5B2-3
Brake Caliper, Front Disc.....	5B1-12
Brake Caliper, Rear Disc	5B2-4
Brake Diagnosis, Duo-Servo Drum.....	5C2-2
Brake Diagnosis, Front Disc	5B1-2
Brake Diagnosis, Leading/Trailing Drum	5C1-2
Brake Diagnosis, Rear Disc.....	5B2-2
Brake Drum Inspection:	
Duo-Servo.....	5C2-2
Leading/Trailing	5C1-2
Brake Drum, Duo-Servo	5C2-2
Brake Drum, Leading/Trailing.....	5C1-3
Brake Fluid Leaks.....	5A-5
Brake Hose and Pipe Inspection	5A-5

Brake Lining Inspection:	
Duo-Servo Drum.....	5C2-2
Front Disc	5B1-2
Leading/Trailing Drum	5C1-2
Rear Disc.....	5B2-2
Brake Linings:	
Duo-Servo Drum.....	5C2-2
Front Disc	5B1-8
Leading/Trailing Drum	5C1-2
Rear Disc.....	5B2-4
Brake Pedal.....	5A-9
Brake Pedal Travel.....	5A-4
Brake Pressure Modulator Valve.....	5E1A-4,53
Brake Rotor Inspection, Front Disc.....	5B1-2
Brake Rotor Inspection, Rear Disc	5B2-3
Brake Rotor Refinishing.....	5B1-10
Brake Rotor, Front Disc.....	5B1-10
Brake Rotor, Rear Disc	5B2-3
Brake System Diagnosis	5A-7
Brake System Testing.....	5A-4
Brake Systems.....	5A1-5
Brake Wheel Cylinder, Duo-Servo Drum	5C2-4
Brake Wheel Cylinder, Leading/Trailing Drum.....	5C1-7
Brake, Duo-Servo Drum	5C2-2
Brake, Leading/Trailing Drum	5C1-2
Brakes, Front Disc	5B1-1
Brakes, Rear Disc.....	5B2-2
Bumper Filler Center Panel Replacement, Front	2A-7
Bumper Filler Side Panel Replacement, Front.....	2A-8
Bumper Replacement, Front	2A-7
Bumper Replacement, Rear	2A-10

C

Cab and Body Maintenance.....	10B-1
Cab Mount Replacement.....	2B-20
Cable Replacement, Hood Release.....	2B-4
Cable, Cruise Control	9B-3
Calibrator, Vehicle Speed Sensor	5E1-5,57
Caliper and Anchor Plate Wear Adjustments:	
Front Disc Brake	5B1-9
Rear Disc Brake	5B2-6
Caliper Inspection, Front Disc Brake	5B1-4
Caliper Inspection, Rear Disc Brake.....	5B2-3
Caliper, Front Disc Brake	5B1-11
Caliper, Rear Disc Brake	5B2-3
Camber Adjustment	3A-6
Camper and Trailer Wiring	8D-1
Camper Battery	6D1-4
Camshaft Replacement:	
4.3L V6	6A3-19
5.0 and 5.7L V8	6A4-19
6.5L Diesel.....	6A6-19
7.4L V8	6A5-15
Accessory/Dome Lamp and Hatch Release Switch Replacement	8B-13
Cargo/Stoplamp Replacement.....	8B-2
Carpet Replacement, Rear Panel	10A4-17
Carrier Case Bushing Replacement.....	4C-20
Carrier Replacement.....	4C-20
Caster Adjustment	3A-6
Cassette Tape Player (ULO)	9A-5
CCOT A/C System.....	1B-3
CDR Valve and Hoses (6.5L V8)	6E2-4
CDR Valve Test (6.5L V8)	6E2-3
Center Bearing.....	4A-3

Center Bearing Replacement.....	4A-10	Control Assembly and Blower Switch (HVAC)	1B-38
Center High-Mounted Stoplamp Replacement.....	8B-2	Control Assembly Lamp Bulb (Heater).....	1A-10
Charging (HVAC)	1B-22	Control Cable (Heater), Defrost	1A-11
Charging System	6D3-1	Control Cable (Heater), Temperature.....	1A-11
Chassis Lubrication	0B-8	Control Head, Radio	9A-24
Checking Wheel and Tire Runout.....	3E-10	Control Switch (Aux. Heater).....	1A-16
Checking Wheel Mounting Surface	3E-3	Controls (Heater).....	1A-2
Checking Wiper Arm Pressure	8E1-4	Coolant Diagnosis.....	6B1-5
Child Seat Top Tether Anchor Points	10A2-15	Coolant Hydrometer	6B1-5
Child Seat Top Tether Back Panel Installation.....	10A2-15	Coolant Level Indicator Diagnosis	6B1-8
Cleaning Agents	10B-2	Coolant Level Indicator, Diesel Engines.....	6B1-8
Cleaning Bright Metal Parts	10B-3	Coolant Pump Replacement Gasoline Engines.....	6B1-20
Cleaning Fabric Trim With Solvent Type Cleaner	10B-2	Coolant Pump Replacement Diesel Engines.....	6B1-21
Cleaning Glass Surfaces.....	10B-3	Coolant Pump	6B1-3
Cleaning Of Fabric Trim With Foam Type Cleaner	10B-2	Coolant Recovery Tank	6B1-2
Cleaning Vinyl Trim	10B-3	Coolant Recovery/Surge Tank Replacement	6B1-10
Close-Couple Catalytic Converter Replacement	6F-3	Coolant Temperature Sensor Replacement.....	8C-12
Clutch, Assembly and Pilot Bearing Replacement.....	7C-7	Coolant Tester	6B1-5
Clutch Driven Members.....	7C-2	Cooling System Diagnosis.....	6B1-6
Clutch Driving Members.....	7C-2	Cooling System	6B1-2
Clutch, Hydraulic System Bleeding.....	7C-7	Cooling System Flushing.....	6B1-10
Clutch Operating Members	7C-2	Cooling System Exhaust Leaks	6B1-3
Clutch Pedal Replacement.....	7C-5	Cooling System Problems Uncommon	6B1-6
Coat Hook Replacement	10A4-7	Cooling System Checks	6B1-3
Coding Lock Cylinders	0A-12	Cooling System Draining and Filling.....	6B1-10
Symbols, Abbreviations, and Acronyms	0A-16	Cooling System Diagnosis.....	6B1-6
Coil Spring Replacement.....	3C-16	Core (Heater), Heater	1A-19
Combination Valve Circuit Test	5-5	Core (HVAC), Evaporator	1B-36
Combination Valve Warning Switch Test.....	5-5	Core (HVAC), Heater	1B-38
Compact Disc Care	9A-26	Core, Evaporator (Aux. HVAC)	1B-45
Compact Disc Player (UNO).....	9A-5	Correcting Non-Uniform Tires.....	0C-10
Companion Flange Runout Gage	0C-6	Corrosion Treatment	2B-24
Compartment Replacement, Front Floor	10A4-6	Cowl Vent Grille Replacement	2B-5
Composite Headlamp Adjustment.....	8B-4	Crankcase Ventilation System (6.5L V8)	6E2-1
Composite Headlamp Bulb Replacement.....	8B-23	Cranking Speed Test (Diesel Engine).....	6A-4
Compression/Cranking Speed Checks	6A-3	Cranking System.....	6D2-2
Compressor Hose Assembly Replacement.....	1B-28	Crankshaft Rear Oil Seal Replacement: 4.3L V6	6A3-17
Compressor (HVAC).....	1B-26	5.0L and 5.7L V8	6A4-18
Compressor and Condenser Hose Assembly (Aux. HVAC)	1B-41	7.4L V8	6A5-14
Compressor and Condenser Hose Assembly (HVAC).....	1B-41	Crankshaft Rear Oil Seal Retainer Replacement: 4.3L V6	6A3-18
Compressor Pressure Switch (HVAC)	1B-31	5.0L and 5.7L V8	6A4-19
Compressor Replacement (4.3L)	1B-26	7.4L V8	6A5-20
Compressor Replacement (5.0L)	1B-26	Cruise Control Cable	9B-4
Compressor Replacement (5.7L)	1B-26	Cruise Control	9B-2
Compressor Replacement (7.4L)	1B-26	Cruise Control Module Replacement.....	9B-4
Compressor Replacement (6.5L)	1B-26	Cruise System Functional Check.....	9B-3
Compressor Sealing Washers (HVAC)	1B-28	Cup Holder Replacement	10A4-5
Condenser Replacement.....	1B-34	Cutting Keys.....	0A-12
Connecting Rod And Piston Replacement: 4.3L V6	6A3-23	Cylinder Head Repair: 4.3L V6	6A3-15
5.0L and 5.7L V8	6A4-21	5.0L and 5.7L V8	6A4-15
6.5L Diesel	6A6-23	6.5L Diesel.....	6A6-15
7.4L V8	6A5-17	7.4L V8	6A5-11
Console Replacement, Floor.....	10A4-7	Cylinder Head Replacement: 4.3L V6	6A3-14
Console Replacement, Overhead	10A4-10	5.0L and 5.7L V8	6A4-14
Continuation of Scheduled Maintenance Services	0A-11	6.5L Diesel.....	6A6-14
Control Assembly (Aux. HVAC)	1B-40	7.4L V8	6A5-11
Control Assembly and Blower Switch (Heater).....	1A-10	Cylinder, Duo-Servo Drum Brake Wheel	5C2-3
		Cylinder, Leading/Trailing Drum Brake Wheel.....	5C1-6

INDEX-4

D

Daytime Running Lights	5F-2
Decal Replacement	2B-24
Decimal and Metric Equivalents	0A-16
Defogger Grid Line Repair	10A3-13
Defogger System, Rear Window Diagnosis	10A3-9
Defogger System, Rear Window	10A3-9
Defrost Control Cable (Heater)	1A-11
Determining Rear Axle Noise	4B1-3
Diagnosis of:	
Battery	6D1-5
Clutch	7C-3
Cranking System	6D2-4
Cruise Control	9B-3
Distributor Ignition System	6D4-3
Drive Belt System	6B1-9
Duo-Servo Drum Brake	5C2-2
Front Disc Brake	5B1-2
Generator	6D3-2
Horn System	8D-1
Leading/Trailing Drum Brake	5C1-2
Manual Seat Adjuster	10A2-2
Noises	6A-9
Poor Fuel Economy/Smoke/Oil/Odors	6A-17
Power Door Lock System Switch	
Replacement	10A1-4
Power Problems	6A-13
Power Window System Switch	
Replacement	10A1-17
Radio	9A-6
Rear Disc Brake	5B2-2
Rear Window Wiper/Washer System	8E2-1
Six Way Power Seat Adjuster	10A2-2
Spark Plugs	6A-19
Starter Motor Noise	6D2-6
Starting/Idling/Shutoff Problems	6A-15
"Service Fuel Filter" Light	6A-9
Windshield Wiper/Washer System	8E1-2
Diesel Emissions	6E2-1
Diesel Engine Compression Test	6A-3
Diesel Engine Diagnosis	6A-4
Diesel Engine Fuel Filters	6C-5
Diesel Fuel Injection	6C2-1
Diesel Fuel Manager/Filter Element	
Replacement	6C-6
Diesel Fuel System Contamination	6C-10
Diesel Glow Plug Electrical System	6D6-1
Diesel Surge Tank	6B1-2
Differential Pilot Bearing Replacement	4C-17
Dipstick Tube Replacement (6.5L V8)	6A6-20
Disc Brake Anchor Plate, Front	5B1-10
Disc Brake Anchor Plate, Rear	5B2-6
Disc Brake Caliper and Anchor Plate	
Wear Adjustments:	
Front	5B1-9
Rear	5B2-6
Disc Brake Caliper Inspection:	
Front	5B1-4
Rear	5B2-3
Disc Brake Caliper, Front	5B1-11
Disc Brake Caliper, Rear	5B2-4
Disc Brake Diagnosis, Front	5B1-3
Disc Brake Diagnosis, Rear	5B2-2
Disc Brake Lining Inspection, Front	5B1-3
Disc Brake Lining Inspection, Rear	5B2-2
Disc Brake Linings, Front	5B1-9
Disc Brake Linings, Rear	5B2-4
Disc Brake Rotor Inspection, Front	5B1-3
Disc Brake Rotor Inspection, Rear	5B2-3
Disc Brake Rotor, Front	5B1-2
Disc Brake Rotor, Rear	5B2-3
Disc Brakes, Front	5B1-2
Disc Brakes, Rear	5B2-2
Distributor and Coil Replacement	6D4-6
Distributor Ignition (DI) System	6D4-2
Distributor Ignition Coil Test	6D4-4
Distributor Inspection	6D4-3
Distributor Pickup Coil Test	6D4-4
Distributor Unit Repair Information	6D4-2
Door Adjustment	10A1-21
Door Hardware Lubrication	10A1-22
Door Hinge Check Assembly, Cargo	10A1-27
Door Hinge Replacement	10A1-8, 19
Door Inside Handle Assembly	
Replacement	10A1-10, 22
Door Lock Cylinder and Outside	
Handle Replacement	10A1-13, 30
Door Lock Actuator Replacement	10A1-12, 24
Door Lock Actuator	10A1-12, 29
Door Lock Switch Replacement, Master	10A1-17
Door Lock Assembly	10A1-12
Door Panel Inner Water Deflector	
Replacement	10A1-6, 18, 27
Door Pressure Relief Valve Replacement	10A1-15
Door Replacement, Cargo	10A1-27
Door Replacement	10A1-7, 19
Door Striker Bolt Replacement	10A1-10, 21
Door Strikers, Cargo	10A1-29, 30
Door Trim Panel Replacement	10A1-4, 18
Doors	10A1-1
Door, Upper Garnish Molding Replacement	10A4-7
Drag Link Replacement	3B3-4
Drain and Fill, Front Axle	4C-4
Drain Cock	6B2-4
Draining and Filling the Cooling System	6B1-10
Draining Fuel from Filter Element Housing	
(6.5L V8)	6C-6
Draining the Fuel Tank	6C-9
Draining Water from the Fuel Manager/Filters:	
6.5L Diesel	6C-5
Drive Axle Replacement	4C-6
Drive Axles, Diagnosis of the	4C-3
Drive Belt - Multiple Ribbed Belt	6B1-3
Drive Belt Inspection	6B1-26
Drive Belt Installation	6B1-26
Drive Belt Pulley Inspection	6B1-26
Drive Belt Replacement	6B1-27
Drive Belt Service	6B1-26
Drive Belt Tensioner Inspection	6B1-22
Drive Belt Tensioner Replacement	6B1-24
Driveline Angles	0C-16
Driveline Vibrations	0C-11
DRL Module and Relay Replacement	8B-14
Drum Brake Adjustment, Duo-Servo	5C2-4
Drum Brake Adjustment, Leading/Trailing	5C1-6
Drum Brake Backing Plate, Duo-Servo	5C2-4
Drum Brake Backing Plate, Leading/Trailing	5C1-6
Drum Brake Diagnosis, Duo-Servo	5C2-2
Drum Brake Diagnosis, Leading/Trailing	5C1-2

Drum Brake Lining Inspection, Duo-Servo	5C2-2
Drum Brake Lining Inspection, Leading/Trailing.....	5C1-2
Drum Brake Linings, Duo-Servo	5C2-3
Drum Brake Linings, Leading/Trailing	5C1-2
Drum Brake Wheel Cylinder, Duo-Servo	5C2-4
Drum Brake Wheel Cylinder, Leading/Trailing	5C1-7
Drum Brake, Duo-Servo	5C2-2
Drum Brake, Leading/Trailing.....	5C1-2
Drum Inspection, Duo-Servo Brake	5C2-2
Drum Inspection, Leading/Trailing Brake	5C1-2
Drum, Duo-Servo Brake	5C2-2
Drum, Leading/Trailing Brake.....	5C1-2
Dual Mass Flywheel:	
Diagnosis - 6.5L V8 (VIN F).....	6A6-30
Repair/Replace - 6.5L (VIN F)	6A6-31
Duct, Air Distributor (HVAC).....	1B-38
Duo-Servo Brake Drum Inspection	5C2-2
Duo-Servo Brake Drum	5C2-2
Duo-Servo Drum Brake Backing Plate	5C2-4
Duo-Servo Drum Brake Diagnosis.....	5C2-2
Duo-Servo Drum Brake Lining Inspection.....	5C2-2
Duo-Servo Drum Brake Linings	5C2-2
Duo-Servo Drum Brake Wheel Cylinder.....	5C2-4
Duo-Servo Drum Brake	5C2-2
Dust Leaks	10B-3

E

Electric Lift Pump (6.5L V8)	6C-8
Electrolyte Freezing	6D1-3
Electronic Accelerator (6.5L V8)	6C-14
Electronic Vibration Analyzer (EVA).....	0C-6
Electrostatic Discharge Sensitive Parts	0A-1
Emblem Replacement, Adhesive-Retained	2B-24
Emissions	6E-1
End Gate Lamp Replacement.....	8B-7
End Gate Replacement.....	10A5-2
End Gate.....	10A5-2
Engagement Switch, Cruise Control.....	9B-6
Engine:	
Coolant Heater	9E-1
Coolant Temperature Sensor	6B1-17
Cooling, Diagnosis of.....	6B1-3
Cooling.....	6B1-3
Electrical	6D-1
Engine oil Viscosity.....	0B-8
Identification Number	0A-3
Lubrication:	
4.3L V6.....	6A3-3
5.0L and 5.7L V8.....	6A4-3
7.4L V8.....	6A5-3
Mountings:	
4.3L V6.....	6A3-27
5.0L and 5.7L V8.....	6A4-25
6.5L Diesel.....	6A6-27
7.4L V8.....	6A5-21
Oil and Engine Oil Filter Change.....	0B-1
Oil Cooler Line Replacement	6B1-27
Oil Filter Bypass Valve Replacement	
(6.5L V8)	6A6-26
Overheating	6B1-3
Replacement:	
4.3L V6.....	6A3-29
5.0L and 5.7L V8.....	6A4-27
6.5L Diesel.....	6A6-28
7.4L V8.....	6A5-23

Wiring.....	6D5-1
Balance Shaft Replacement (4.3L).....	6A3-21
Camshaft Replacement:	
4.3L V6.....	6A3-19
7.4L V8.....	6A5-15
Connecting Rod And Piston Replacement:	
4.3L V6.....	6A3-23
7.4L V8.....	6A5-17
Crankshaft Rear Oil Seal Replacement:	
4.3L V6.....	6A3-17
7.4L	6A5-14
Crankshaft Replacement:	
4.3L V6.....	6A3-26
7.4L V8.....	6A5-20
Cylinder Head Repair:	
4.3L V6.....	6A3-15
7.4L V8.....	6A5-11
Cylinder Head Replacement:	
4.3L V6.....	6A3-14
7.4L V8.....	6A5-11
Driveability, And Diagnosis	6A-1
Lubrication:	
4.3L V6.....	6A3-3
6.5L Diesel.....	6A6-3
7.4L V8.....	6A5-3
Exhaust Manifold Replacement:	
4.3L V6.....	6A3-14
7.4L V8.....	6A5-11
Flywheel Ring Gear Replacement:	
4.3L V6.....	6A3-27
7.4L V8.....	6A5-21
Front Cover Replacement:	
4.3L V6.....	6A3-16
7.4L V8.....	6A5-13
Front Mounting Replacement:	
4.3L V6.....	6A3-28
6.5L	6A6-26
7.4L V8.....	6A5-21
Hydraulic Lifter Repair:	
4.3L V6.....	6A3-13
7.4L V8.....	6A5-11
Hydraulic Lifter Replacement:	
4.3L V6.....	6A3-13
7.4L V8.....	6A5-10
Intake Manifold Replacement:	
4.3L V6.....	6A3-12
7.4L V8.....	6A5-9
Main Bearing Replacement:	
4.3L V6.....	6A3-25
7.4L V8.....	6A5-19
Measuring Camshaft Lobe Lift:	
4.3L V6.....	6A3-19
7.4L V8.....	6A5-15
Oil Pan Replacement:	
4.3L V6.....	6A3-17
7.4L V8.....	6A5-13
Oil Pump Repair:	
4.3L V6.....	6A3-17
7.4L V8.....	6A5-14
Oil Pump Replacement:	
4.3L V6.....	6A3-17
7.4L V8.....	6A5-14
Rear Mounting Replacement:	
4.3L V6.....	6A3-29
7.4L V8.....	6A5-22

INDEX-6

Rocker Arm and Pushrod Replacement:	
4.3L V6.....	6A3-10
7.4L V8.....	6A5-8
Rocker Arm Cover Replacement:	
4.3L V6.....	6A3-10
7.4L V8.....	6A5-8
Rocker Arm Stud Replacement:	
4.3L V6.....	6A3-13
Valve Adjustment:	
4.3L V6.....	6A3-11
Valve Stem Seal and Valve Spring Replacement:	
4.3L V6.....	6A3-11
7.4L V8.....	6A5-9
Evacuation (HVAC).....	1B-21
Evaporator Core (Aux. HVAC).....	1B-45
Evaporator Core (HVAC).....	1B-36
Evaporator Tube (A/C).....	1B-33
Evaporator Tube (Aux. HVAC).....	1B-41
Exhaust Manifold Replacement:	
4.3L V6.....	6A3-14
5.0L and 5.7L V8.....	6A4-14
6.5L Diesel.....	6A6-9
7.4L V8.....	6A5-11
Evaporator Tube Replacement (C69).....	1B-41
Evaporator Core Replacement.....	1B-45
Exhaust Close-Couple Catalytic Converter Replacement.....	6F-3
Exhaust Manifold Left Side (6.5L).....	-9
Exhaust Manifold Right Side (6.5L).....	6A6-10
Exhaust Manifold Replacement (6.5L).....	6A6-9
Exhaust Oxidation Catalytic Converter Replacement (Diesel Engines).....	6F-7
Exhaust Parts Removing.....	6F-3
Exhaust System.....	6F-3
Exhaust System, Diagnosis of the (6.5L V8).....	6F-2
Exhaust Three-Way Catalytic Converter Replacement.....	6F-3
Expansion (Orifice) Tube (HVAC).....	1B-35
Explanation of Scheduled Maintenance Services.....	0B-1
Exterior Cleaning.....	10B-3

F

Fan And Fan Clutch Replacement.....	6B1-12
Fan Clutch Diagnosis.....	6B1-4
Fan Clutch Engine Overheating.....	6B1-4
Fan Clutch Looseness.....	6B1-4
Fan Clutch Noise.....	6B1-4
Fan Clutch Silicone Fluid Leaks.....	6B1-4
Fan Relay.....	6B1-13
Fastener Strength Identification.....	0A-14
Fender Protectors Replacement.....	2B-24
Fender Replacement.....	2B-7
Filter Replacement (6.5L V8), Air Cleaner.....	6C-2
Floor Storage Compartment Replacement.....	10A4-7
Fluid Capacities.....	0B-14
Fluids and Lubricants.....	0B-13
Flushing Brake Hydraulic System.....	5-15
Flushing the Cooling System.....	6B1-10
Flushing the Hydraulic Booster System.....	5D2-2
Flywheel Replacement (6.5L).....	6A6-30
Flywheel Ring Gear Replacement:	
4.3L V6.....	6A3-27
5.0L and 5.7L V8.....	6A4-25
6.5L Diesel.....	6A6-30
7.4L V8.....	6A5-21

Fog Lamp Adjustment.....	8B-7
Fog Lamp Bulb Replacement.....	8B-8
Foreign Material Deposits.....	10B-3
Fork Replacement, Shift.....	4C-17
Four-Wheel Drive, Diagnosis of the.....	4C-4
Four-Wheel Drive Indicator Lamp Replacement.....	8B-16
Frame Alignment.....	2A-3
Frame and Bumpers.....	2A-2
Frame Bracket Knockout Removal.....	3A-6
Frame Centerline.....	2A-3
Frame Crack Repair.....	2A-4
Frame Diagnosis Of The Frame.....	2A-2
Frame Horizontal Check.....	2A-4
Front Axle I-Beam Front Suspension.....	3C-31
Front Axle, Diagnosis of the.....	4C-2
Front Axle Lubrication.....	4C-21
Front Axle Noise Diagnosis.....	4C-2
Front Axle Vent Hose Replacement.....	4C-5
Front Cover Replacement:	
4.3L V6.....	6A3-16
5.0L and 5.7L V8.....	6A4-16
6.5L Diesel.....	6A6-17
7.4L V8.....	6A5-13
Front Disc Brake Anchor Plate.....	5B1-10
Front Disc Brake Caliper and Anchor Plate Wear Adjustments.....	5B1-10
Front Disc Brake Caliper Inspection.....	5B1-4
Front Disc Brake Caliper.....	5B1-12
Front Disc Brake Diagnosis.....	5B1-3
Front Disc Brake Lining Inspection.....	5B1-3
Front Disc Brake Linings.....	5B1-9
Front Disc Brake Rotor Inspection.....	5B1-3
Front Disc Brake Rotor.....	5B1-10
Front Disc Brakes.....	5B1-1
Front End Alignment, Diagnosis of.....	3A-5
Front End Alignment, Measuring.....	3A-5
Front Engine Mounting Replacement:	
4.3L V6.....	6A3-28
5.0L and 5.7L V8.....	6A4-25
6.5L Diesel.....	6A6-27
7.4L V8.....	6A5-21
Front Parking Lamp Replacement.....	8B-8
Front Side Marker and Reflector Replacement.....	8B-9
Front Suspension And Axle.....	3C-1
Front Suspension, Diagnosis of.....	3C-4
Front Wheel Alignment.....	3A-1
Front Wheel Speed Sensor.....	5E1A-5,54,55
Fuel and Fuel Vapor Hoses.....	6C-11
Fuel Filler Cap.....	6C-11
Fuel Gage Sending Unit Replacement.....	6C-12
Fuel Injection (6.5L).....	6C2-1
Fuel Lines (6.5L V8).....	6C-11
Fuel Pump Flow Test.....	6C-8
Fuel Pump Pressure Test.....	6C-8
Fuel Pump Replacement (6.5L V8).....	6C-8
Fuel Pump Test (6.5L V8).....	6C-8
Fuel Pump.....	6C-8
Fuel System.....	6C-1
Fuel system (6.5L).....	6C-1
Fuel System Cleaning.....	6C-10
Fuel Tank.....	6C-9
Fuel Tank Filler Neck.....	6C-11
Fuel Tank Leak Test.....	6C-10
Fuel Tank Purging.....	6C-10
Fuel Tank Replacement.....	6C-10

Full-Floating Axle (10 1/2-Inch Ring Gear)	4B1-13
Full-Floating Axle (11-Inch Ring Gear)	4B1-16
Functional Check, Cruise System	9B-3
Functional Test:	
Heater	1A-3
HVAC	1B-6
4WAL	5E1-10

G

Gasoline Engine Compression Test	6A-3
Gasoline in the Fuel System	6C-10
Gate Latch and Rod Replacement	10A5-3
Gate Latch Operating Handle Replacement	10A5-6
Gate Replacement	10A5-5
Gate Striker and Striker Bolt Replacement	10A5-3
General Balance Precautions	3E-12
General Vehicle Lifting and Jacking	0A-10
Generator:	
Bench Check	6D3-3
Replacement	6D3-4
Glow Plug Electrical System (6.5L)	6D6-1
Specifications	6D3-5
Grille Replacement, Cowl Vent	2B-5
Grille Replacement, Radiator	2B-5

H

Handle Replacement, Assist	10A4-5
Handle Replacement, Gate	10A5-6
Handling of Refrigerant Lines and Fittings	1B-16
Handling Refrigerant-134a	1B-16
Hazard Knob Assembly Replacement	3F-6
Headlamp Switch Replacement	8B-17
Headliner Replacement	10A4-8
Heater and Ventilation	1A-1
Heater Assembly, Diagnosis of the (6.5L V8)	6C-7
Heater Assembly Replacement (6.5L V8)	6C-7
Heater Core (Aux. Heater)	1A-19
Heater Core (Heater)	1A-19
Heater Core (HVAC)	1B-38
Heater Hoses (Aux. Heater)	1A-18
Heater Hoses (HVAC)	1B-38
Heater Hoses	1A-18
Heater Output Temperature Check	1A-4
Heater System (HVAC)	1B-5
Heater, Engine Coolant	9E-1
Heater, Ventilation, and Air Conditioning	1B-1
Height-Sensing Brake Proportioning Valve	
Adjustment	5A-10
Height-Sensing Brake Proportioning Valve	5A-10
Hinge Replacement, Door	10A1-19
Horn Replacement	8D-3
Horn Switch Replacement	3F-7
Hose Assembly (Aux. HVAC), Compressor	
and Condenser	1B-41
Hose Assembly (HVAC), Compressor and	
Condenser	1B-28
Hose Replacement, Front Axle Vent	4C-5
Hoses (HVAC), Heater	1B-38
Hoses, Heater	1A-18
Hub and Axle Shaft Stud Runout	0C-10
Hub and Bearing, Knuckle and Seal	
Assembly Replacement	3C-23
Hub And Drum Assembly Replacement	
(10 1/2-Inch Ring Gear)	4B1-13

Hub and Drum Assembly Replacement	
(11-Inch Ring Gear)	4B1-17
Hub, Bearing and Seal Replacement	3C-9
Hydraulic Booster:	
Accumulator Leakdown Test	5D2-8
Assembly	5D2-2
Checking and Adding Fluid	5D2-9
Fluid and Fluid Handling	5D2-2
Fluid Level Inspection	5D2-7
Functional Test	5D2-8
Pipes, Hoses, and Fittings	5D2-2
Seal Leak Diagnosis	5D2-7
Service Precautions	5D2-9
Substandard or Contaminated Fluid	5D2-2
System Diagnosis of	5D2-3
System Tests	5D2-7
Hydraulic Lifter Repair:	
4.3L V6	6A3-13
5.0L and 5.7L V8	6A4-13
6.5L Diesel V8	6A6-13
7.4L V8	6A5-11
Hydraulic Lifter Replacement:	
4.3L V6	6A3-13
5.0L and 5.7L V8	6A4-13
6.5L Diesel V8	6A6-13
7.4L V8	6A5-11
Hydraulic System Fluid Loss	5D2-7
Hydrometer	6B1-5

I

Idle Arm Replacement	3B3-3
Ignition Base Timing	6D4-2
Ignition Coil Test	6D4-4
Ignition Lock System	3F-2
Ignition System	6D4-2
Inclinometer	0C-6
Indicator Switch Replacement	4C-4
Inner CV Joint/Boot (Tripot Housing)	
Replacement	4C-13
Inspecting Engine Mountings:	
4.3L V6	6A3-27
5.0L and 5.7L V8	6A4-25
6.5L Diesel V8	6A6-26
7.4L V8	6A5-21
Instrument Cluster and Indicator Lamp	
Replacement	8C-10
Instrument Panel and Carrier Assembly	
Replacement	10A4-2
Instrument Panel and Gages	8C-2
Instrument Panel Compartment Lamp and	
Switch Replacement	8B-17
Insufficient Heating or Defrosting	1A-4
Intake Manifold Replacement:	
4.3L V6	6A3-12
5.0L and 5.7L V8	6A4-12
6.5L Diesel V8	6A6-8
7.4L V8	6A5-9
In-Tank Fuel Filter	6C-12
Interior Cleaning	10B-2
Interior Colors	10A4-20
Interior Trim	10A4-2
Intermediate Shaft Replacement	3F-8

INDEX-8

J

J1930 Word Conversion.....	0A-19
Jump Starting in Case of Emergency	6D1-9

K

Key Identification and Usage	0A-12
Kick Panel Crawl Side	10A4-12

L

Latch Assembly Replacement, Gate	10A5-7
Latch Striker Adjustment, Gate	10A5-7
Leading/Trailing Brake Drum Inspection.....	5C1-2
Leading/Trailing Brake Drum.....	5C1-2
Leading/Trailing Drum Brake Adjustment	5C1-6
Leading/Trailing Drum Brake Backing Plate.....	5C1-6
Leading/Trailing Drum Brake Diagnosis	5C1-2
Leading/Trailing Drum Brake Lining Inspection.....	5C1-2
Leading/Trailing Drum Brake Linings.....	5C1-2
Leading/Trailing Drum Brake Wheel Cylinder	5C1-7
Leading/Trailing Drum Brake.....	5C1-2
Leaf Spring Replacement, Rear Suspension	3D-4
Leaf Springs, I-Beam Front Suspension	3C-37
Leak Testing (HVAC)	1B-8
License Lamp Replacement.....	8B-9
License Plate Bracket Replacement.....	2A-12
Lifting and Jacking, General Vehicle	0A-10
Lift Pump Circuit Check (6.5L V8).....	6C-8
Lining Inspection, Duo-Servo Drum Brake	5C2-2
Lining Inspection, Front Disc Brake.....	5B1-3
Lining Inspection, Leading/Trailing Drum Brake.....	5C1-2
Lining Inspection, Rear Disc Brake	5B2-2
Linings, Duo-Servo Drum Brake	5C2-2
Linings, Front Disc Brake.....	5B1-9
Linings, Leading/Trailing Drum Brake.....	5C1-2
Linings, Rear Disc Brake	5B2-4
Lock Assembly Replacement.....	10A5-7
Lock Cylinder Coding	0A-12
Lock Cylinder Binding.....	10A1-12
Lock Replacement, Door.....	10A1-23
Locking Rear Axle	4B1-2
Lower Ball Joint Replacement:	
Four Wheel Drive.....	3C-25
Two Wheel Drive.....	3C-12
Lower Control Arm and Bushing Replacement:	
Four Wheel Drive.....	3C-27
Two Wheel Drive.....	3C-18
Luggage Carrier Replacement	9F-1
Luggage Carrier	9F-1

M

Main Bearing Replacement:	
4.3L V6	6A3-25
5.0L and 5.7L V8)	6A4-23
6.5L Diesel V8	6A6-24
7.4L V8	6A5-19
Maintenance and Lubrication	0B-1
Maintenance Items	0B-13
Maintenance Schedule I.....	0B-1
Maintenance Schedule II.....	0B-1
Manual Seat Adjuster, Diagnosis of	10A2-1
Master Cylinder.....	5A1-1

Master Cylinder Assembly.....	5A1-3
Measuring Axle Shaft Stud Runout	0C-10
Measuring Camshaft Lobe Lift:	
4.3L V6	6A3-19
5.0L and 5.7L V8	6A4-19
7.4L V8	6A5-15
Measuring Driveline Angles.....	0C-16
Measuring Rotor or Axle Shaft Runout	0C-10
Measuring Wheel and Tire Runout.....	3E-10
Metric Fasteners	0A-14
Metric Wheel Nuts And Bolts.....	3E-7
Metric-English Conversion	0A-16
Mode Actuator (HVAC)	1B-39
Model Identification.....	0A-4
Modulator Valve, Brake Pressure.....	5E1A-4,53
Module, Cruise Control.....	9B-5
Moldings Replacement, Adhesive-Retained	2B-24
Molding Replacement, Piller.....	10A4-16
Motor and Fan (HVAC), Blower	1B-37
Motor and Fan, Blower (Aux. HVAC).....	1B-46
Multifunction Turn Signal Lever Replacement.....	3F-6

N

Negative Battery Cable, When to Disconnect.....	0A-1
Non-Demountable Type Drum Replacement.....	4B1-14

O

Odor Procedure, Air Conditioning System.....	1B-26
Off-Vehicle Balancing.....	0C-8
Oil Cooler Gasket Replacement.....	6B2-13
Oil Cooler Replacement	6B2-13
Oil Cooler System Service	6B1-27
Oil Filter Bypass Valve (5.0L and 5.7L V8).....	6A4-23
Oil Leak Diagnosis.....	6A-19
Oil Pan Replacement:	
4.3L V6	6A3-17
5.0L and 5.7L V8	6A4-17
6.5L Diesel V8.....	6A6-20
7.4L V8	6A5-13
Oil Pressure Sensor Replacement.....	8C-12
Oil Pump Drive Replacement (6.5L V8)	6A6-16
Oil Pump Repair:	
4.3L V6	6A3-17
5.0L and 5.7L V8	6A4-18
6.5L Diesel V8.....	6A6-21
7.4L V8	6A5-14
Oil Pump Replacement:	
4.3L V6	6A3-17
5.0L and 5.7L V8	6A4-18
6.5L Diesel V8.....	6A6-21
7.4L V8	6A5-14
One-Piece Propeller Shaft.....	4A-8
Option and Process Codes	0A-18
Outer CV Joint/Boot Replacement.....	4C-9
Output Shaft Replacement.....	4C-16
Outside Mirror Replacement.....	10A1-14
Over Center Preload Adjustment	3B-11
Overhead Console Lamp Replacement.....	8B-17
Oxidation Catalytic Converter Replacement (Diesel Engines)	6F-4

P

P-Metric Tires.....	3E-2
Paint.....	2B-27
Panel Replacement, Door Trim.....	10A1-26
Parking Brake:	
Adjustment.....	5F-4
Cable Inspection.....	5F-2
Cable System.....	5F-2
Cables.....	5F-3
Diagnosis of.....	5F-2
Drum Inspection.....	5F-2
Drum Replacement.....	5F-8
Front Cable.....	5F-3
Lever.....	5F-3
Lining Inspection.....	5F-2
Lining Replacement.....	5F-10
Lubrication.....	5F-3
Rear Cables.....	5F-4
Switch.....	5F-2
"BRAKE" Lamp.....	5F-2
Performance Test (HVAC).....	1B-6
Pickup Box Replacement.....	2B-20
Pickup Coil Test.....	6D4-4
Pinion Clearance (Gas Engines).....	6D2-7
Pinion Flange and Dust Deflector/Oil Seal Replacement.....	4B1-11
Pinion Oil Seal/Companion Flange Replacement (10 1/2-Inch Ring Gear).....	4B1-16
Pinion Oil Seal/Pinion Flange Replacement (11-Inch Ring Gear).....	4B1-21
Pitman Arm Replacement:	
I-Beam Front Axle Models.....	3B3-8
Pitman Shaft Seal Replacement.....	3B-10
Plate Wear Adjustments:	
Front Disc Brake Caliper and Anchor.....	5B1-10
Rear Disc Brake Caliper and Anchor.....	5B2-6
Power Brake Units.....	5D2-4
Power Door Lock Actuator Replacement.....	10A1-12
Power Steering Fluid Level.....	3B-7
Power Steering Gear and Pump.....	3B-1
Power Steering Gear.....	3B-1
Power Steering Hoses.....	3B-15
Power Steering Hydraulic Pump.....	3B-2
Power Steering Locating Oil Leaks.....	3B-5
Power Steering Pump Replacement.....	3B-11
Power Steering System, Bleeding The.....	3B-7
Power Steering System, Diagnosis Of.....	3B-2
Power Steering System, Flushing The.....	3B-8
Power Steering System Pressures.....	3B-21
Power Steering System Test.....	3B-6
Pressure Testing.....	6B2-8
Prevailing Torque Fasteners.....	0A-15
Propeller Shaft.....	4A-2
Balance Check.....	0C-11
Balancing.....	0C-13
Phasing.....	0C-15
Replacement (Front Drive).....	4A-12
Runout Check.....	0C-11
One-Piece.....	4A-8
Three-Piece.....	4A-9
Two-Piece.....	4A-8
Pulley Inspection.....	6B1-26

R

R-1334a Metric Fitting Sizes.....	1B-48
Radial Tire Lead/Pullchart.....	3E-6
Radiator:	
Cap.....	6B2-2
Core, General Core Repair.....	6B2-10
Grille Replacement.....	2B-5
Hose Replacement.....	6B1-12
Internal Deposits.....	6B2-4
Repair Procedures.....	6B2-9
Replacement.....	6B2-5
Service.....	6B2-8
Support.....	2B-18
Testing Procedures.....	6B2-8
Diagnosis of.....	6B2-3
Maintenance Recommendations.....	6B2-3
Scale Removal.....	6B2-4
Radio:	
Control Head.....	9A-26
Receiver.....	9A-26
Diagnosis of.....	9A-6
Rear Auxiliary Hose Assembly Replacement (69).....	1B-43
Rear Axle Assembly Replacement.....	4B1-21
Rear Axle Lubrication.....	4B1-22
Rear Axle Noise, Diagnosis of the.....	4B1-3
Rear Axle Operation.....	4B1-2
Rear Crankshaft Oil Seal Replacement (6.5L V8).....	6A6-22
Rear Disc Brake Anchor Plate.....	5B2-6
Rear Disc Brake Caliper and Anchor Plate Wear Adjustments.....	5B2-6
Rear Disc Brake Caliper Inspection.....	5B2-3
Rear Disc Brake Caliper.....	5B2-4
Rear Disc Brake Diagnosis.....	5B2-2
Rear Disc Brake Lining Inspection.....	5B2-2
Rear Disc Brake Linings.....	5B2-4
Rear Disc Brake Rotor Inspection.....	5B2-3
Rear Disc Brake Rotor.....	5B2-3
Rear Disc Brakes.....	5B2-2
Rear Engine Mounting Replacement (6.5L V8).....	6A6-28
Rear Fender Marker Lamp Replacement.....	8B-9
Rear Mounting Replacement:	
4.3L V6.....	6A3-29
5.0L and 5.7L V8.....	6A4-26
7.4L V8.....	6A5-22
Rear Propeller Shaft Replacement (Rear Drive).....	4A-7
Rear Suspension.....	3D-1
Rear Window Washer Pump Replacement.....	8E2-8
Rear Window Wiper:	
Arm Assembly Replacement.....	8E2-5
Blade Assembly Replacement.....	8E2-5
Blade Element Replacement.....	8E2-5
Controller Assembly Replacement.....	8E2-6
Motor Assembly Replacement.....	8E2-7
Rear Window Wiper/Washer Switch Assembly Replacement.....	8E2-8
Rear Window Wiper/Washer System.....	8E2-1
Recommended Fluids and Lubricants.....	0B-13
Reed Tachometer.....	0C-4
Reed Tachometer Usage.....	0C-4
Refinishing Brake Rotors.....	5B1-10
Refinishing, Aluminum Wheels.....	3E-13

INDEX-10

Refinishing, Flexible Plastic	10A4-17
Refrigerant and Oil Capacity	1B-18
Refrigerant Lines and Fittings, Handling of	1B-17
Refrigerant Oil Distribution	1B-23
Refrigerant Recovery	1B-20
Refrigerant System Checks (HVAC)	1B-6
Refrigerant System Diagnosis (HVAC)	1B-6
Refrigerant-134a, Handling	1B-16
Refrigeration System (HVAC)	1B-4
Relay (HVAC), Blower Motor	1B-33
Relay Replacement, Snow Plow	8D-3
Relay Rod Replacement	3B3-4
Relays and Switches (HVAC)	1B-6
Removing Exhaust Parts	6F-3
Remote Keyless Entry	9K-1
Remote Keyless Entry Diagnosis	9K-2
Remote Keyless Entry Transmitter Battery Replacement	9K-2
Remote Keyless Entry Control Module Replacement	9K-2
Remote Keyless Entry Programming Transmitter	9K-3
Replacement Labels	0A-2
Replacement Tires	3E-2
Resonator Assembly Replacement	6C-3
Resistor (Heater), Blower Motor	1A-11
Resistor (HVAC), Blower Motor	1B-38
Resistor, Blower Motor (Aux. HVAC)	1B-45
Rocker Arm and Pushrod Replacement:	
4.3L V6	6A3-10
5.0L and 5.7L V8	6A4-10
7.4L V8	6A5-8
Rocker Arm Cover Replacement:	
4.3L V6	6A3-10
5.0L and 5.7L V8	6A4-9
6.5L V8	6A6-10
7.4L V8	6A5-8
Rocker Arm Stud Replacement:	
4.3L V6	6A3-13
5.0L and 5.7L V8	6A4-13
Roof Garnish Molding Replacement	10A4-7
Roof Marker Lamp Replacement	8B-11
Rotor Inspection, Front Disc Brake	5B1-3
Rotor Inspection, Rear Disc Brake	5B2-3
Rotor Refinishing, Brake	5B1-11
Rotor Replacement	3C-21
Rotor, Front Disc Brake	5B1-10
Rotor, Rear Disc Brake	5B2-3

S

Scheduled Maintenance Services,	
Continuation of	0B-1
Scheduled Maintenance Services,	
Explanation of	0B-1
Scheduled Maintenance Services	0B-1
Sealed Beam Headlamp Adjustment	8B-5
Sealed Beam Headlamp Replacement	8B-5
Sealing Washers, Compressor (HVAC)	1B-28
Seat Belt Care	10B-3
Seat Belt Replacement	10A2-11
Seat Replacement, Front Bench	10A2-3
Seat Replacement, Front Bucket	10A2-3
Seat Replacement, Front Split Bench	10A2-3
Seat Replacement, Intermediate	10A2-6
Seat Replacement, Rear	10A2-7

Seat Support Replacement, Rear (Extended Cab)	10A2-7
Seat Trim Cover Replacement, Front	10A2-3
Seats	10A2-1
Semi-Floating Axle (8 1/2 and 9 1/2-Inch Ring Gear)	4B1-7
Sending Unit Replacement, Fuel Gage	6C-12
Sensor Calibrator, Vehicle Speed	5E1-5,57
Sensor, Front Wheel Speed	5E1A-5,54,55
Sensor, Vehicle Speed	5E1-5,57
Service Parts Identification Label	0A-23
Servo Drum Brake Adjustment	5C2-4
Shackle Bushing Replacement, Rear Suspension	3D-5
Shackle Replacement, Rear Suspension	3D-4
Shaft and Axle Tube Assembly Replacement	4C-16
Shaft Replacement, Output	4C-16
Sheet Metal Adjustments	2B-20
Sheet Metal Repair	2B-24
Sheet Metal Support	2B-18
Sheet Metal	2B-1
Service Parts Identification Label	0A-2
Shift Fork Replacement	4C-17
Shock Absorber, I-Beam Front Suspension	3C-31
Shock Absorber Replacement, Rear Suspension	3D-2
Shock Absorber Replacement, Two Wheel Drive	3C-10
Shock Absorber Test	3C-6
Shock Absorbers, Diagnosis of	3C-6
Six Way Power Seat Adjuster, Diagnosis of	10A2-2
Skid Plate Replacement	4C-4
Slip Yoke Splines	4A-13
Snow Plow Relay Location	8D-2
Spare Tire Box Stowage	3E-14
Spare Tire Carrier Support	3E-14
Spare Tire Hoist and Shaft	3E-14
Spare Tire Mounting	3E-14
Spark Plug Replacement	6D4-8
Spark Plug Specifications	6D4-11
Spark Plug Wire Replacement	6D4-8
Spark Plug Wires	6D4-3
Spark Plugs	6D4-2
Speakers, Radio	9A-27
Special Tool Ordering Information	0A-2
Speed Sensor Calibrator, Vehicle	5E1-5,56
Speed Sensor, Front Wheel	5E1A-5,54,55
Speed Sensor, Vehicle	5E1-5,56
Stabilizer Shaft, I-Beam Front Suspension	3C-31
Stabilizer Shaft Replacement, Four Wheel Drive	3C-20
Stabilizer Shaft Replacement, Rear- Suspension	3D-2
Stabilizer Shaft Replacement, Two Wheel Drive	3C-11
Stain Removal	10B-2
Standard Steering Column Unit Repair (Column Shift)	3F1A-1
Standard Steering Column Unit Repair (Floor Shift)	3F1B-1
Starter Motor Noise	6D2-6
Starter Motor Replacement	6D2-7
Starter Motor	6D2-2
Starter Shims	6D2-9
Starter Specifications	6D2-9

Steering Arm, Knuckle and Spindle- I-Beam Front Suspension	3C-35
Steering Column, Diagnosis of	3F-2
Steering Column Replacement	3F-8
Steering Column Seal Replacement.....	3F-9, 10
Steering Column Standard (Col Shft), Accident Damage	3F1A-11
Steering Column Standard (Col Shft), Housing Cover.....	3F1A-5
Steering Column Standard (Col Shft), Lower Column	3F1A-9
Steering Column Standard (Col Shft), Parts	3F1A-2
Steering Column Standard (Col Shft), Upper Column	3F1A-4
Steering Column Standard (Flr Shft), Accident Damage	3F1B-13
Steering Column Standard (Flr Shft), Housing Cover.....	3F1B-6
Steering Column Standard (Flr Shft), Lower Column	3F1B-10
Steering Column Standard (Flr Shft), Parts	3F1B-2
Steering Column Standard (Flr Shft), Upper Column	3F1B-4
Steering Column Tilt (Col Shft), Accident Damage	3F2A-16
Steering Column Tilt (Col Shft), Housing Cover.....	3F2A-6
Steering Column Tilt (Col Shft), Lower Column	3F2A-14
Steering Column Tilt (Col Shft), Mid Column.....	3F2A-8
Steering Column Tilt (Col Shft), Parts.....	3F2A-2
Steering Column Tilt (Col Shft), Upper Column...	3F2A-4
Steering Gear Adjustment.....	3B-10
Steering Gear Replacement.....	3B-9
Steering Knuckle Replacement, Two Wheel Drive...	3C-15
Steering Linkage Inspection.....	3B3-2
Steering Linkage.....	3B3-1
Steering Shock Absorber Inspection	3B3-11
Steering Shock Absorber Replacement, K-Models.....	3B3-11
Steering Shock Absorber Replacement.....	3B3-11
Steering Wheel and Column On-Vehicle Service ...	3F-1
Steering Wheel Replacement.....	3F-7
Stereo Radio AM/FM (UM7 or UM6).....	9A-2
Stereo AM/FM W/Integral Cassette (ULO).....	9A-4
Stereo AM/FM W/Compact Disc (UNO).....	9A-4
Straightening Frames	2A-4
Substandard or Contaminated Brake Fluid	5A-2
Sunshade Replacement	10A4-5
Sunshade Vanity Mirror Lamp Replacement.....	8B-17
Supplemental Inflatable Restraint (SIR) Handling	A-1
Switch, Compressor Pressure (HVAC)	1B-31
Switch Replacement, Indicator.....	4C-4
T	
Taillamp Replacement	8B-113
Tape Player and Cassette Care	9A-26
Tape Player.....	9A-26
Temperature Control Cable (Heater).....	1A-10
Temperature/Defrost Actuator (HVAC)	1B-39
Thermal Actuator Replacement.....	4C-5
Thermostat Diagnosis.....	6B1-4
Thermostat Housing Crossover Replacement.....	6B1-19
Thermostat Replacement	6B1-17
Thermostat	6B1-3
Thread Repair (7.4L)	6A5-24
Thread Repair	6A6-32
Three-Piece Propeller Shaft	4A-9
Three-Way Catalytic Converter Replacement.....	6F-3
Tie Rod Clamp and Adjuster Tube Positioning...	3B3-11
Tie Rod Replacement, I-Beam Front Axle Models	3B3-11
Tie Rod Replacement.....	3B3-8
Tilt Steering Column Unit Repair (Column Shift) ...	3F2A-1
Tilt Steering Column Unit Repair (Floor Shift) ...	3F2B-1
Tilt Wheel Lever Replacement	3F-7
Timing Adjustment, Ignition	6D4-2
Timing Chain and Sprocket Replacement (6.5L V8).....	6A6-18
Tire and Wheels, Diagnosis of.....	3E-5
Tire and Wheel Vibrations	0C-6
Tire Chain Usage	3E-3
Tire Inflation and Load Limits.....	3E-7
Tire Mounting and Dismounting	3E-9
Tire Placard.....	3E-3
Tire Repair.....	3E-9
Tire Rotation.....	3E-8
Tire Speed Chart	0C-6
Tires And Wheels	3E-2
Toe-In Adjustment	3A-6
Torque Rod Replacement.....	10A5-5
Torsion Bar(s) and Support Assembly Replacement.....	3C-30
Tow Hooks Replacement.....	2A-12
Transfer Case Operation Four-Wheel Drive Low Range.....	7D-2
Transfer Case Switch Replacement.....	7D-6
Transfer Case Diagnosis Electronic Synchronizer (Models 4401 and 4470 Only)	7D-4
Transfer Case Skid Plate Replacement.....	7D-5
Transfer Case Oil Change.....	7D-5
Transfer Case Clutch Coil Relay Replacement.....	7D-6
Transfer Case Vent Hose.....	7D-7
Transfer Case Diagnosis	7D-3
Transfer Case Linkage Adjustment.....	7D-5
Transfer Case Identification.....	7D-2
Transfer Case Rear Extension and Rear Retainer Housing (NP 241 Transfer Case)	7D-2
Transfer Case Replacement.....	7D-9
Transmission Diagnosis, Automatic 4L80-E	7A17A-1
Transmission Identification Number	0A-3
Transmission Indicator (PRNDL) Replacement	8C-13
Transmission, Manual.....	7B-1
Backup Lamp Switch Replacement.....	7B-5
Clutch Spindown Time	7B-1
New Venture Gear 4500.....	7B-1
Shift Control Lever Replacement.....	7B-3
Switch, backup Lamp Replacement	7B-5
Transmission Mount	7B-1
Vehicle Speed Sensor Replacement.....	7B-4
Trim Panel Replacement, Body Side (Suburban and Utility)	10A4-13
Trim Panel Replacement, Gate.....	10A5-5
Trim Panel Replacement, Roof.....	10A4-7
Trim Panel Replacement, Quarter.....	10A4-11
Trim Panel Replacement, Quarter Rear Lower	10A4-15
Tube (HVAC), Evaporator.....	1B-33
Tube, Evaporator (Aux. HVAC)	1B-41

INDEX-12

Turbocharger	6J-1
Turbocharger, Diagnosis of the (6.5L V8)	6J-4
Turbocharger Inspection	6T-5
Turbocharger Replacement (6.5L V8)	6J-7
Turbocharger Waste-Gate Actuator Replacement	6J-10
Two-Piece Propeller Shaft	4A-8

U

Underhood Reel Lamp Replacement	8B-12
Underhood Stationary Lamp Replacement	8B-13
Universal Joint	4A-3
Universal Joints	4A-13
Upper Ball Joint Replacement, Four Wheel Drive	3C-24
Upper Ball Joint Replacement, Two Wheel Drive	3C-14
Upper Control Arm and Bushing Replacement, Four Wheel Drive	3C-25
Upper Control Arm and Bushing Replacement, Two Wheel Drive	3C-17

V

Vacuum Booster Assembly	5D1-2
Vacuum Booster Check Valve Hose and Routing	5D1-1
Vacuum Booster Diagnosis	5D1-2
Vacuum Booster Gaging Procedure	5D1-4
Vacuum Pump	6H-1
Vacuum Pump (6.5L V8)	6E2-2
Vacuum Pump, Diagnosis of the (6.5L V8)	6H-13
Vacuum Pump Replacement (6.5L V8)	6H-3
Valve Adjustment: 4.3L V6	6A3-11
5.0L and 5.7L V8	6A4-10
Valve Stem Seal and Valve Spring Replacement: 4.3L V6	6A3-11
5.0L and 5.7L V8	6A4-11
6.5L Diesel V8	6A6-14
7.4L V8	6A5-9
Valve, Brake Pressure Modulator	5E1A-4,53
Vehicle Certification Label	0A-2
Vehicle Identification Number	0A-3
Vehicle Speed Sensor Calibrator	5E1-5,56
Vehicle Speed Sensor Calibrator Replacement	8C-14
Vehicle Speed Sensor	5E1-5,56
Vehicle Storage, Battery Protection During	6D1-3
Vent Control Cables (Heater)	1A-13
Vent Hose Replacement	4B1-7
Ventilation, Heater	1A-3
Vibration Categories	0C-2
Vibration Classes	0C-2
Vibration Diagnosis	0C-1
Vibration Diagnosis Charts	0C-18

W

Washer Hose Routing	8E1-3
Washing And Waxing	10B-2
Waste-Gate Actuator Replacement (6.5L V8)	6J-6
Water in the Fuel System (6.5L V8)	6C-10
Water Leaks	10B-3
Water Sensor Assembly Replacement (6.5L V8)	6C-7
Weatherstrip Lubrication	10B-3
Weatherstrip Replacement, Gate	10A5-8
Weatherstrip Replacement, Side Door	10A1-33
Welding	2A-4

Wheel and Tire Installation	3E-9
Wheel Balance Weights	3E-13
Wheel Bearing Adjustment, I-Beam Front Suspension	3C-34
Wheel Bearing Adjustment	3C-9
Wheel Bearing/Cup Replacement	4B1-14
Wheel Bearings, Diagnosis of	3C-9
Wheel Bolt Replacement	4B1-15
Wheel Cylinder, Duo-Servo Drum Brake	5C2-4
Wheel Cylinder, Leading/Trailing Drum Brake	5C1-7
Wheel Hub Bolt Replacement: Four Wheel Drive	3C-22
I-Beam Front Suspension	3C-35
Two Wheel Drive	3C-10
Wheel Hub/Rotor Assembly, I-Beam Front Suspension	3C-31
Wheel Removal	3E-7
Wheel Repair	3E-7
Wheel Speed Sensor, Front	5E1A-5,54,55
Wheel Stud Replacement	4B1-11
Wheelhouse Panel Replacement	2B-13
Wheels	3E-3
Wheel Runout	0C-9
Wheel Weights	0C-9
When to Disconnect the Negative Battery Cable	0A-2
Window Hinge Replacement, Gate	10A5-8
Window Lower Garnish Molding Replacement, Rear	10A4-11
Window Minor Scratch and Abrasion Removal	10A3-14
Window Polishing	10A3-14
Window Regulator and Motor Replacement	10A1-13, 26
Window Regulator Handle Replacement	10A1-3, 16
Window Replacement, Latched Body Side	10A3-9
Window Replacement, Rear	10A3-9
Window Replacement, Stationary Body Side	10A3-7
Window Replacement	10A1-13, 25
Window Run Channel Replacement	10A1-14, 25
Window Run Channel Weatherstrip Replacement	10A1-25
Window Striker Replacement, Gate	10A5-8
Window Support Replacement, Gate	10A5-9
Window Upper Garnish Molding Replacement, Rear	10A4-10
Window Water Leak Tests	10A3-15
Windshield, Garnish Molding Replacement	10A4-7
Windshield Inspection	10A3-6
Windshield Installation	10A3-6
Windshield Removal (Broken Windshield)	10A3-4
Windshield Removal (Undamaged Windshield)	10A3-4
Windshield Service	10A3-4
Windshield Water Leak Repair	10A3-16
Windshield Wiper Arm Assembly Replacement	8E1-16
Windshield Wiper Blade Assembly and Element Replacement	8E1-16
Windshield Wiper Motor Assembly Diagnosis	8E1-4
Windshield Wiper Motor Assembly Replacement	8E1-17
Windshield Wiper Motor Circuit Board and Terminal Assembly	8E1-1
Windshield Wiper Transmission Assembly Replacement	8E1-17
Windshield Wiper/Washer System	8E1-2
Wiper Arm Chatter	8E1-4
Wiper Blade Element Set Check	8E1-4
Worm Bearing Preload Adjustment	3B-10