

INDEX

	PAGE		PAGE
A/C Compressor Clutch.....	64-0	Brake/Transmission Shift Interlock (BTSI)	
A/C Compressor Clutch Relay.....	64-0	Solenoid.....	138-0
A/C Controller.....	64-0	Canister Purge Solenoid.....	20-6,
A/C High Pressure Cutout Switch.....	64-0		23-3,
A/C Low Pressure Cutout Switch.....	64-0		24-2
Air Bag Warning Lamp.....	47-1	Cargo Door Defogger Grid, LH Rear.....	61-0
Arming Sensor.....	47-0	Cargo Door Defogger Grid, RH Rear.....	61-0
Ashtray Lamp.....	114-1	Cargo Lamp.....	110-8
Audio Alarm Module.....	76-0	Cargo Lamp Switch.....	110-8
Auxiliary Battery.....	17-0	Center High Mount Stoplamp (CHMSL) -	
Auxiliary Battery Cable.....	17-0	Pickup.....	110-8
Auxiliary Battery Relay.....	17-0	Center High Mount Stoplamp (CHMSL) -	
Auxiliary Cooling Fan A/C Pressure		Suburban, Utility.....	110-4
Switch.....	31-0	Cigar Lighter.....	114-0, 2
Auxiliary Cooling Fan Relay.....	31-0	Clearance Lamps, Rear, LH.....	110-3
Auxiliary Cooling Fan Temperature		Clearance Lamps, Rear, RH.....	110-3
Switch.....	31-0	Clearance Lamps, Roof.....	110-2
Auxiliary Engine Cooling Fan Motor.....	31-0	Clutch Start Switch.....	30-0, 2
Auxiliary Heater Control.....	60-0	Contact Switch, LH Cargo Door.....	61-0
Auxiliary Heater and A/C Controls, Front....	63-2	Contact Switch, RH Cargo Door.....	130-1,
Auxiliary Heater and A/C Controls, Rear...	63-2		61-0
Auxiliary Heater and A/C Logic Module....	63-2	Convenience Center.....	11-4
Auxiliary HVAC Blower Motor.....	63-2	Cooling Fan Relay.....	31-0
Auxiliary HVAC Mode Door Motor		Courtesy Lamps.....	114-0
(Module).....	63-2	Crank Sensor.....	25-1,
Auxiliary Mode Door Motor, Rear.....	63-3		26-1,
Auxiliary Temperature Door Motor, Rear....	63-3		27-1
Auxiliary Power Connectors.....	11-8	Cruise Control Brake Switch.....	34-0, 2
Backup Lamps.....	112-0	Cruise Control Clutch Switch.....	34-1, 2
Backup Lamp Switch.....	110-7,	Cruise Control Module.....	34-1
	112-0	Cruise Control Switch.....	34-0, 2
Barometric Pressure Sensor.....	25-1,	Daytime Running Lamps (DRL) Module....	104-0, 2,
	26-1,		4, 6
	27-1	Daytime Running Lamps(DRL) Relay.....	104-0, 2,
Battery, Auxiliary.....	17-0		4, 6
Battery, LH (Diesel).....	30-2	Diagnostic Link Connector (DLC).....	50-0
Battery, RH (Diesel).....	30-2, 3	Diagnostic Energy Reserve Module	
Battery, RH (Gas).....	30-0, 1	(DERM).....	47-1
Blower Motor Front.....	60-2,	Discriminating Sensors.....	47-0
	63-2	Distributor Ignition Control (DIC) Module...	20-4,
Blower Motor, Rear.....	63-3,		21-5,
	60-1		23-5,
Blower Resistor Block.....	60-2		24-5
Blower Resistor Block, Rear (Auxiliary		Dome Lamp Override Switch.....	114-0, 2,
HVAC).....	63-3,		4, 6
	60-1	Dome/Reading Lamps.....	114-4, 5,
Blower Switch.....	60-2		6, 7, 8
Blower Switch, Rear.....	60-0	Door Jamb Switch, LH Front.....	114-0, 2,
Brake Pressure Modulator Valve (BPMV)....	44-0, 1		4, 6
Brake Pressure Warning Switch.....	44-0	Door Jamb Switch, RH Front.....	114-0, 2,
			4, 6

	PAGE		PAGE
Door Lock Motor, LH Front.....	130-0, 114-0, 2, 4, 6, 132-0, 2	Exhaust Gas Recirculation (EGR) Solenoid Valve.....	20-6, 7, 21-3
Door Lock Motor, LH Rear.....	130-1, 132-2	Exhaust Gas Recirculation (EGR) Pulse Width Modulation Solenoid Valve,.....	25-2, 26-2
Door Lock Motor, RH Front	114-0, 132-0, 2	Exhaust Gas Recirculation (EGR) Vent Valve Solenoid (6.5L)Diesel.....	25-2
Door Lock Motor, RH Rear	130-1, 132-2	Exhaust Gas Recirculation (EGR)Boost Pulse Width Modulation Solenoid Valve,	26-2, 27-2
Door Lock Motor, RH Rear Cargo Door	130-1, 132-0	Exhaust Gas Recirculation (EGR)Electronic Vacuum Regulator Solenoid Valve.....	21-4, 23-3
Door Lock Relay.....	130-1, 132-0	Fog Lamp Relay.....	100-2, 104-8
Door Lock Switch, LH Front	130-0, 132-1, 2	Fog Lamp Switch	100-2, 104-8
Door Lock Switch, RH Front.....	130-0, 132-1, 2	Fog Lamps.....	100-2, 104-8
Driver Inflator Module (Air Bag).....	47-1	Four-Wheel Drive Indicator Lamp.....	38-0
Electrochromatic Rearview Mirror with Compass.....	84-0	Front Axle Solenoid Switch.....	38-0
Electronic 4-Speed Automatic Overdrive Transmission.....	20-5, 23-1, 23-6, 24-1, 24-6, 25-6, 26-6, 27-6	Front Park/Turn.....	110-0
Electronic Accelerator Control Module (Diesel).....	25-3, 26-4, 27-4	Front Identification Lamps.....	110-0
Electronic Injection Pump.....	25-5, 26-5, 27-5	Front/Rear Heater, A/C Control Logic Module (w/Rear A/C)	63-3
Endgate Clearance Lamps.....	110-3	Front Park/Turn Lamps	110-0
Engine Coolant Temperature Sensor.....	21-2, 23-1, 24-1, 25-1, 26-1, 27-1	Fuel Cycle Control Module	21-6
Engine Coolant Temperature Sender	81-0, 2, 20-2	Fuel Heater (Diesel).....	25-7, 26-7, 27-7
Evaporative Canister Purge Solenoid.....	20-6,2 3-3,24-2	Fuel Lift Pump (Diesel)	25-3, 26-3, 27-3
		Fuel Pump and Sender.....	20-1, 21-1, 21-6, 23-2, 24-4
		Fuel Pump Oil Pressure Switch & Sender	20-1, 21-1, 21-6, 23-2, 24-4, 25-3, 26-3, 27-3

INDEX

	PAGE		PAGE
Fuel Pump Relay.....	20-1, 21-1, 21-6, 23-2, 24-4, 25-3, 26-3, 27-3	Idle Speed Control (ISC) Actuator (VIN N).....	24-2
Fuse Block, I/P	11-0	Ignition Coil.....	20-4, 21-5, 23-5, 24-5
Generator.....	30-1, 30-3	Ignition Switch	10-1
Glow Plug Controller	25-7, 26-7, 27-7	Inflator Module.....	47-1
Glow Plugs.....	25-7, 26-7, 27-7	Instrument Cluster	81-0, 2
Hazard Flasher	110-0	Intake Manifold Air Temperature Sensor....	25-1, 26-1, 27-1
Headlamp & Panel Dimmer Switch	100-0, 104-1, 110-0, 2, 3, 5, 6, 114-0, 3, 5, 7, 1,	Key-in Warning, Buzzer Switch	76-0
Headlamp Dimmer Switch.....	100-0, 1, 104-1, 3, 5, 7	Knock Sensor	20-4, 21-5, 23-5, 24-5
Headlamps, (Base).....	100-0, 104-1, 5	Knock Sensor Module.....	21-5
Headlamps, (Quad Halogen)	100-1, 104-3, 7	License Lamps	110-5
Heated Oxygen Sensor.....	20-2, 23-1	Linear Exhaust Gas Recirculation (EGR) Solenoid.....	24-1, 24-2
Heater and A/C Control Module	63-0	Low Blower Relay, Rear	60-1-, 63-3
High Blower Relay, Rear (auxiliary HVAC)	60-1, 2, 63-3	Low Engine Coolant Level Indicator Module (Diesel)	81-3
Horn	40-0	Low Engine Coolant Level Sensor (VIN P, F, S).....	81-3
Horn Relay	40-0	Lumbar Seat Pump	141-0, 1
Identification Lamps.....	110-2	Lumbar Seat Switch.....	141-0, 1
Interior Lamps.....	114-0	Manifold Absolute Pressure (MAP) Sensor	20-2, 3, 21-2, 23-1, 24-1, 2, 25-1, 26-1, 27-1
I/P Cluster	81-0, 81-2	Medium Blower Relay, Rear.....	60-1, 63-3
I/P Compartment Box Lamp	114-0	Mode Door Motor (Module)	63-1
I/P Fuse Block	11-0	Overhead Console Lamps	114-8
Idle Air Control (IAC) Valve	20-7, 21-2, 3, 23-4, 24-3	Oxygen Sensor.....	21-2, 23-1, 24-1
		Park Brake Warning Switch.....	104-3, 41-0, 1
		Park/Neutral Position and Backup Lamp Switch	30-0, 2
		Power Amplifier	150-1

	PAGE		PAGE
Power Amplifier Relay	150-1	TCC/Stoplamp Switch	110-0, 6,
Power Front Seat Control Switch	140-0		138-0
Power Front Seat Forward/Rearward Motor	140-0	Temperature Door Motor (Module), Front	63-1
Power Front Seat Front Tilt Motor	140-0	Throttle Body Fuel Injectors (1 & 2)	20-1,
Power Front Seat Rear Tilt Motor	140-0		21-1,
Power Outside Rearview Mirror Switch	147-0		21-6,
Power Outside Rearview Mirrors	147-0		23-1,
Power Seat Control Switch	140-0		24-4
Powertrain Control Module (PCM)	20-0,	Throttle Position (TP) Sensor	20-2, 3,
	21-0,		21-2,
	23-0,		23-1,
	24-0,		24-1
	25-0,	Transfer Case Relay	38-0
	26-0,	Transfer Case Shift Illumination Lamp	38-0
	27-0	Transfer Case Switch	38-0
Radio Receiver	150-0, 2	Transmission Input Speed Sensor	23-6,
Rear Dome Lamp	114-3		24-6,
Rear Door Jamb Switch, Suburban	114-3		26-6,
Rear Liftgate Defogger Grid	61-0		27-6
Rear Window Defogger Switch	61-0	Turn Signal Flasher	110-0, 6
Rear Window Release Solenoid	135-0	Turn/Hazard Switch	110-0, 4,
Rear Window Release Switch	135-0		6
Rear Window Washer Pump Motor	92-0	Underhood Fuse-Relay Center	11-2
Rear Window Wiper/Washer Module	92-0	Underhood Reel Lamp	114-9
Rear Window Wiper/Washer Switch	92-0	Vehicle Speed Sensor	33-0
Recirculation Door Motor	63-1	Vehicle Speed Sensor Buffer	33-0, 1
Remote Keyless Entry Module	132-0, 2	Water Valve (Suburban Only)	64-0
Remote Outside Rearview Mirror Switch ..	114-1	Water-in-Fuel Sensor (Diesel)	81-3
Safety Belt Switch	47-1,	Wheel Speed Sensors,	44-1
	76-1	Window Lockout Switch	120-2
Side Marker Lamps, Front	110-0	Window Motors,	120-0, 1,
Speakers	150-0, 1,		2
	2	Window Switches	120-0, 1,
Starter Motor	30-0, 2		2, 3
Starter Solenoid	30-0, 2	Windshield Washer Pump(Front)	91-0
Stoplamp Relay	110-1, 6	Windshield Wiper Motor Module	91-0
Tail, Stop and, Turn Signal Lamp Assembly	110-1,	Windshield Wiper/Washer Switch	91-0
	4, 5		